

LOREX®

1080p Wired Floodlight




V261LCD-EG


Quick Start Guide

lorex.com


Package Contents

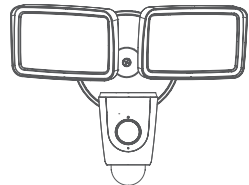


1080p Wired Floodlight

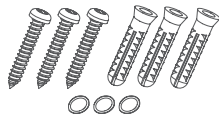


Mounting Screws,
Anchors & Silicone Gaskets
(x3)

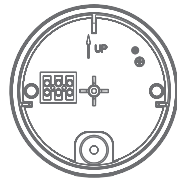

Mounting Bracket




Phillips Machine Screw



Hooks

Safety Precautions




CAUTION

Risk of fire.

Do not install camera near flammable or combustible surfaces.

Risk of electrical shock.

Disconnect the power at the fuse box before installation.



Disclaimers

Always follow code standards when installing wired connections.

This floodlight camera must be installed on a wall and a UL listed junction box.

This floodlight includes an Auto Mechanical IR Cut Filter. When the camera changes between Day/Night viewing modes, an audible clicking noise may be heard from the floodlight. This clicking is normal, and indicates that the camera filter is working.

Audio recording without consent is illegal in certain jurisdictions. Lorex Corporation assumes no liability for use of its products that does not conform with local laws.

FCC Notice


THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND

(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

Need Help?

Visit us online for up-to-date software and complete instruction manuals



1

Visit lorex.com

2

Search for the model number of your product

3

Click on your product in the search results

4


Click on the **Downloads** tab

Copyright © 2022 Lorex Corporation

As our products are subject to continuous improvement, Lorex reserves the right to modify product design, specifications and prices, without notice and without incurring any obligation. E&OE. All rights reserved.

Product Overview

Back Panel

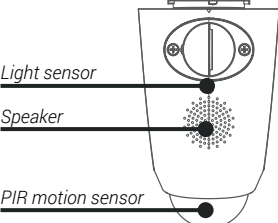


Light sensor

Speaker

PIR motion sensor

Front Panel

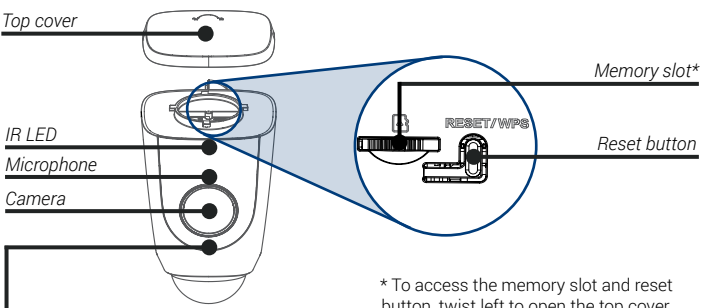

Top cover

Memory slot*

IR LED

Microphone

Camera


Reset button

* To access the memory slot and reset button, twist left to open the top cover.

LED Indicator

| Behavior | Meaning |
|----------------------|---|
| ● (steady) | Operating correctly. |
| ● (flashing) | Ready for connection. |
| ● (flashing rapidly) | Mobile device is attempting to connect to the camera. |
| ● (steady) | Device malfunction. Press and hold the reset button until you hear a chime, and then repeat the setup. |
| ● (flashing) | Network connection failed. Press and hold the reset button until you hear a chime, and then repeat the setup. |
| ● (flashing rapidly) | Memory slot error. Try removing and re-inserting the included memory slot card, or try a different card. |
| ●● (alternating) | Firmware upgrade in progress. |

Adjusting knobs

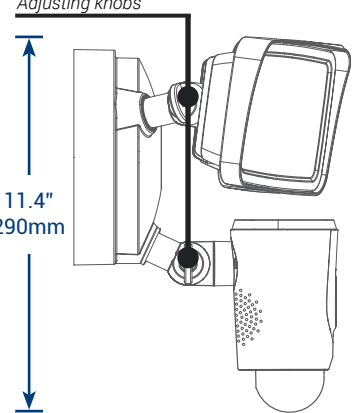


11.4" / 290mm

7.3" / 185mm

Floodlights

Phillips machine screw

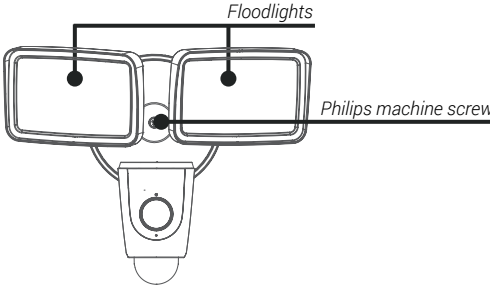

12.8" / 325mm

STEP 1: Preparation

Before assembly, there are important preparations to make.

To prepare for installation:

TURN OFF POWER TO YOUR FLOODLIGHT CIRCUIT AT THE FUSEBOX TO ENSURE NO POWER IS BEING SENT. If you are unsure of which breaker controls the circuit, then turn off the main power switch.

If you do not know where your breaker is or how to turn off power, consult a licensed electrician.


Verify that the supply voltage is correct. Connect fixture to a 100 VAC~240 VAC 50/60 Hz power source.

DO NOT connect floodlight to a dimmer switch or timer.

If you are not replacing a light fixture, you will need to run power cabling to the install location, and purchase a UL listed junction box for a licensed electrician to install.

Recommendation:

Mount the floodlight camera 10 feet (3 meters) high with the motion detector levelled to the ground for optimal detection of human-sized objects as far as 32 feet (10 meters).

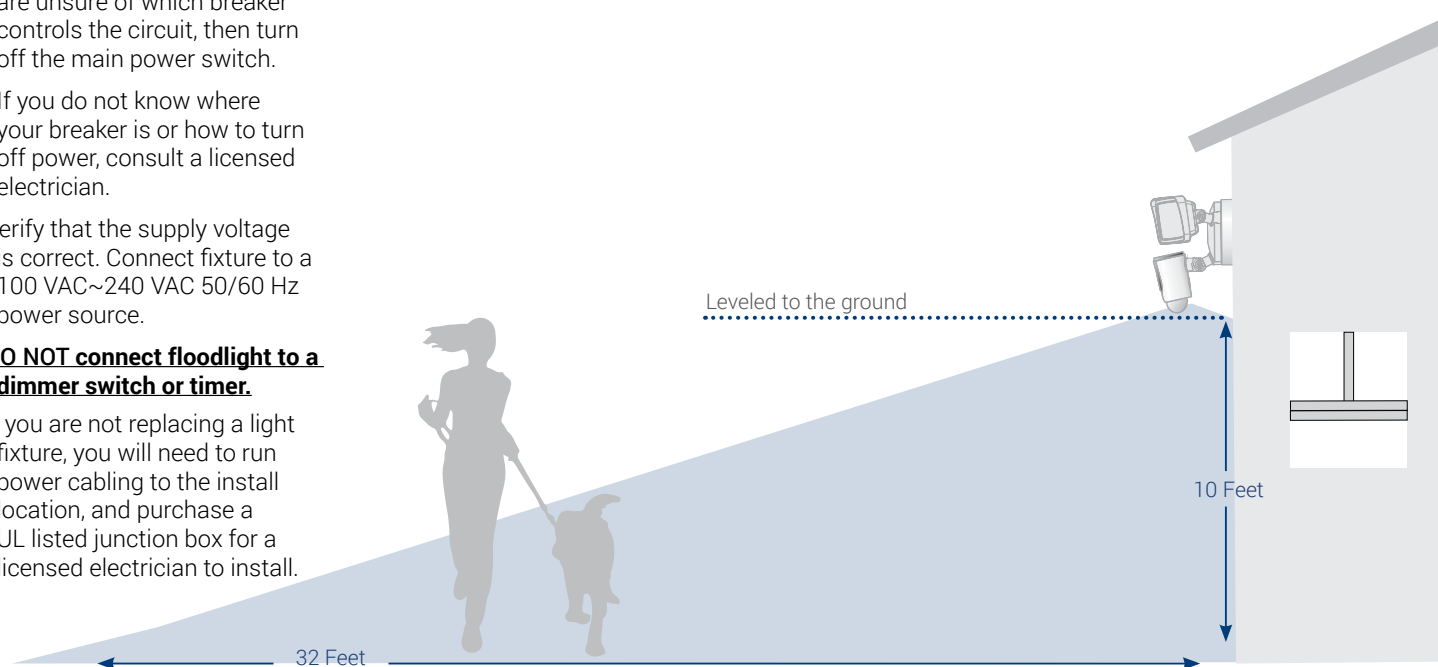

Levelled to the ground

10 Feet

 
32 Feet

V261LCD-EG_QSG_EN_R1

STEP 2: Secure the Mounting Bracket

Next, install the floodlight's mounting bracket.


1. With the power shut off, remove the existing light fixture from the wall.
2. Disconnect the wires.
3. On the floodlight, loosen the center screw by using a Phillips head screwdriver, and then separate the floodlight from the mounting bracket.
4. Gently pull and remove the terminal board.
5. Place the mounting bracket on the desired location and mark 2 holes.
NOTE: Be sure to follow the "Up" direction on the mounting bracket.
6. Use a 1/4" drill bit to drill in the marked holes.
7. Install the supplied **mounting anchors** into the drilled holes with a hammer.
8. Slide the **silicone gaskets** onto the mounting screws.
9. Run the wires through the cable entry.
10. Align the bracket and use a Phillips head screwdriver to secure the supplied **mounting screws** into the mounted anchors.

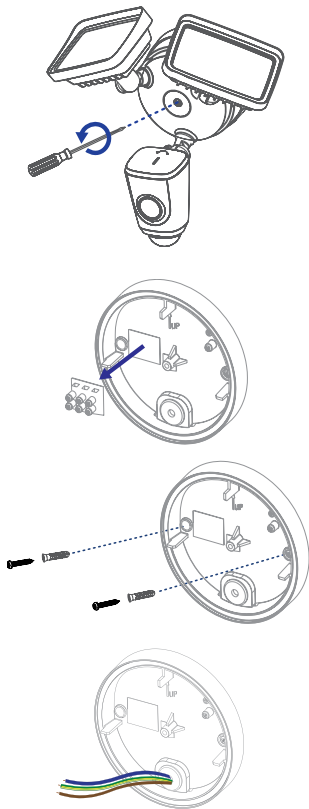

STEP 3: Connect the Wires

To wire the floodlight:

 1
Hang the floodlight camera from the mounting bracket using the supplied **hooks**.

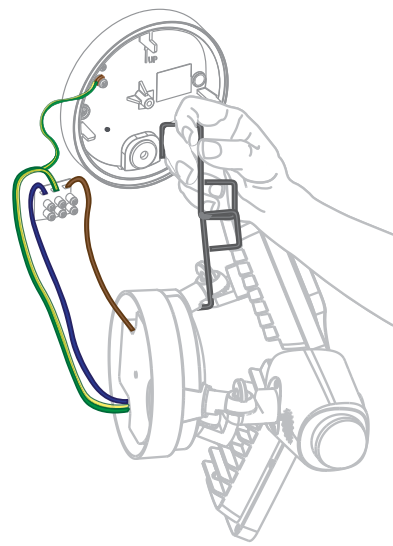

- A Hook one end into your floodlight camera.
- B Hook the other end into the bracket.

2

 
IMPORTANT: Properly ground fixture.
* Power wire colors in your home may be different. In such a case consult a licensed electrician.

Connect the existing wall wires:

Connect the **Neutral wires (blue*)** to the **N terminal**.
Connect the **Live wires (brown*)** to the **L terminal**.
Connect the **Ground wire (green/yellow*)** to the **ground terminal**.

3


Push the terminal board back onto the two pegs in the mounting bracket.

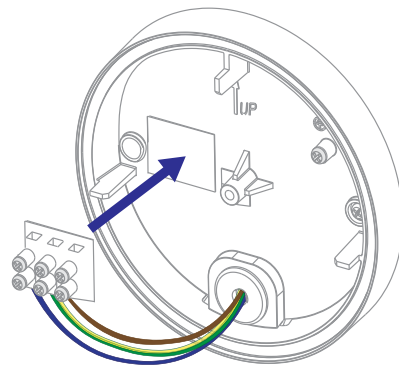

STEP 4: Secure the Floodlight

Next, install the floodlight camera.

 1. Carefully put away all the wires into the bracket.
2. Insert the **Phillips machine screw** through the center hole and secure the floodlight camera to the mounting bracket.

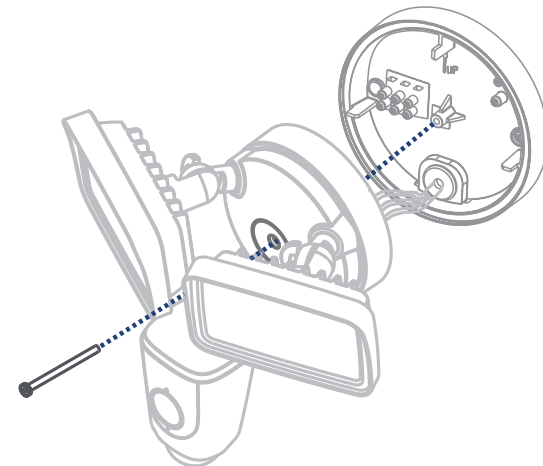

3. Adjust the camera and floodlights using the adjusting knobs.
4. You may now restore power at the fusebox.

NOTE: If the status LED on the floodlight camera does not turn on, check to make sure wiring is done correctly.

STEP 5: In-app Setup

 
Next, connect the floodlight camera to the Lorex Home app.

To scan the QR code:

1. Download and install the free **Lorex Home** app from the App Store or Google Play Store.
2. Tap the Lorex Home icon to launch the app. Tap **Sign up**, then follow the on screen prompts to create an account. Record your account details below and store in a secure location:

Email: _____
Account Password: _____

3. Wait for the floodlight to start up. This may take up to 5 minutes after reconnecting power at the breaker.
4. Once the status LED on the floodlight is flashing green, tap **+** in the Lorex Home app.
5. Scan the QR code on the side of the floodlight camera using your mobile device's camera.
NOTE: If your mobile device cannot scan the QR code, tap **Manually enter Device ID**.

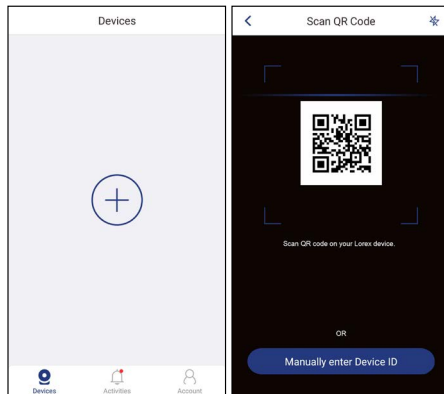


To link the floodlight:

1. Once the status LED on the floodlight is flashing green, tap **Next** in the Lorex Home app. The app will connect your mobile device to the floodlight's hotspot.
2. Create a secure password for the floodlight. Record your floodlight password below and store in a secure location:

Floodlight Password: _____

3. Select your Wi-Fi network from the list, then enter the Wi-Fi password to connect your floodlight to the Internet.

 
NOTE: If the Wi-Fi connection is weak, try moving your router closer or adding a Wi-Fi extender.

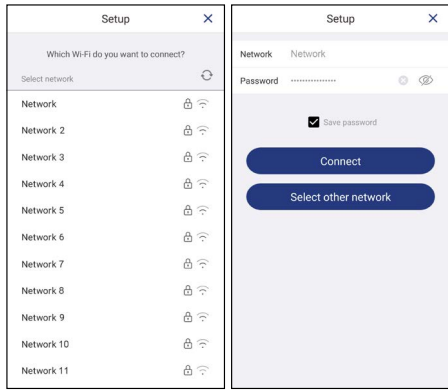

4. Once the status LED on the floodlight is solid green, tap **Next** to add the floodlight to your Lorex Home account.
5. Set a name for the floodlight and configure date & time preferences, then tap **Complete**.

Overview of Lorex Home app

 
Live viewing screen:

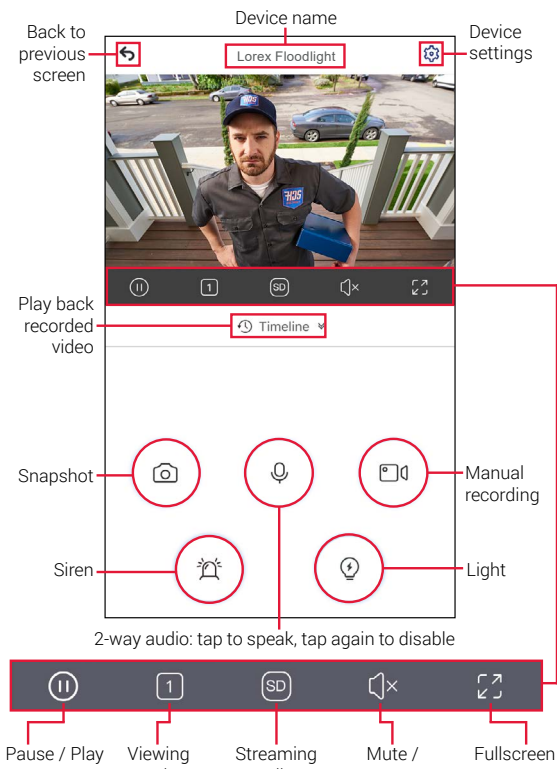

* Change the streaming quality to **SD** (Standard Definition) to conserve bandwidth while watching live video. This will not impact the quality of recorded video.

To configure the floodlight motion detection:

 1. Tap **Device Settings**.
2. Tap **Floodlight Settings**.
3. **Mode** is set to **Motion Activation** by default. Tap to change the floodlights from being activated by motion detection to **Manual**. Manually turn the floodlights on and off in the live screen view.
4. Tap **PIR Area**:
 - A. Slide the bar on the left to adjust the distance at which motion will activate your floodlights.
 - B. Tap the **Zone(s)** on or off to activate motion detection from three different areas.
 - C. Tap **Save**.
5. **Light Duration** is set to **1 minute** by default. Tap to change the floodlight's length of time when activated from motion detection.

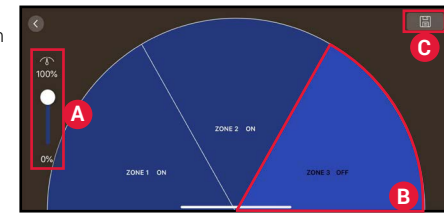

Overview of the most common screens and controls in the Lorex Home app. For complete instructions on using the app, see the Lorex Home app manual on the floodlight's product page at help.lorex.com.